



EM Series Gesture Model
12.1" Windows CE Embedded
Panel Computer

EMG7

EMG7-312A8-00DC-x11-01

Instruction Manual

Table of Contents

1. Introduction.....	4
2. Notes	4
3. Precautions for safe use.....	4
3-1 Warnings	5
3-2 Cautions	6
3-3 Handling of LCDs	8
3-4 Handling of Touch Screens	8
3-5 Handling of microSD card.....	9
4. Items Included in Packag	10
5. Names of Parts.....	11
5-1 Front	11
5-2 Back.....	11
5-3 Top	12
5-4 Bottom	12
6. External Interface	13
6-1 microSD Card Slot.....	13
6-2 Serial Port (COM1/COM2).....	13
6-3 Ethernet.....	14
6-4 USB Host Port	14
6-5 USB Device Port.....	14
6-6 Audio Interface (LINE OUT)	15
6-7 Power Connector.....	15
7. Specification	16
7-1 General Specification	16
7-2 Environmental Specification	16
7-3 Installation Specification	17
8. Installation	18
8-1 Installation Conditions	18
8-2 Panel Mounting.....	19
8-2-1 Panel Dimension.....	19
8-2-2 Installing the Gasket	19
8-2-3 Installation Procedure	20
8-3 Mounting to a “VESA” Arm	21
9. Wiring	22
9-1 Using Accessory Connectors.....	22
9-2 Cautions for Power Supply Wiring	23
9-3 Cautions for Grounding	23
9-4 Caution for Wiring of Signal Lines	23
10. Inserting and Removing the microSD Memory Card	24
10-1 Inserting the Memory Card	24
10-2 Removing the microSD Memory Card.....	25
11. Calibration	26
11-1 Sensor Sensitivity Calibration	26
11-2 Coordinate Calibration	26

- 12. Starting Method 27
- 13. Maintenance 27
 - 15-1 Display..... 27
 - 15-2 Regular Maintenance 27
 - 15-3 Changing of Batteries..... 27
- 14. Compatible Standards 28
 - 14-1 UL Standards..... 28
 - 14-2 CE Marking..... 28
 - 14-3 RoHS Directive 28
 - 14-4 FCC 28
- 15. List of Option 29
- 16. Warranty and Repair 30
 - 16-1 Inquires..... 30
 - 16-2 Warranty 30
 - 16-3 Production Discontinuance..... 30
 - 16-4 Repair Condition..... 30
- 17. Others..... 31

Appendix: Outline drawing (SM3-001909-10)

1. Introduction

Thank you for choosing Seedsware products.

Please read this manual carefully and use the product correctly.

2. Notes





- Reproduction and/or duplication of this product and/or this manual, in any form, in whole or in part, without permission is strictly prohibited.
- Contents of this product and/or this manual are subject to change without previous notice .
- Although all efforts have been made to ensure the accuracy of this product and/or the contents of this manual, should you notice any errors or have any questions, feel free to contact and notify us.
- Seedsware shall not be held liable in any way for damages or losses, nor be held responsible for any claims by a third party as a result of using this product.

3. Precautions for safe use

Precautions are noted in this manual in order for the product to be used safely. Read this manual along with other related manuals carefully to understand the correct handling and functions of the EMG7.

Safety Symbol Legends

Safety symbols listed below are noted throughout this manual for the EMG7 to be used correctly and safely. These symbols stand for very important safety information as noted below:

 Warning	Indicates a procedure, condition, or statement that, if not strictly observed, could result in severe human injuries or loss of life.
 Caution	Indicates a procedure, condition, or statement that, if not strictly observed, could result in human injuries or property damage.
	Indicates a procedure, condition, or statement that is strictly prohibited for correct use of the equipment. (Forbidden)
	Indicates a procedure, condition, or statement that should be strictly followed for correct use of the equipment. (Mandatory)

3-1 Warnings



Warnings for Design

- ⊘ Designing switches that can cause human injuries and/or property damages on the Touch Screen is strictly prohibited. Unintentional output signals due to malfunction of the main body, units, and/or cables can cause serious injuries. Design the system so that switches with major functions are equipped on devices other than the EMG7 itself.
- ⊘ Designing safety related switches on EMG7 is prohibited. Switches related to safety, such as emergency stop switches, should be made on a different hardware.
- ⊘ Design the system so there is no malfunctions due to communication anomalies between the host controller and the EMG7. It can cause human injuries and/or property damages.
- ⊘ Do not use EMG7 as a major warning device that may cause injuries/serious material damages, and or production stoppage. Control devices related to critical warning displays and warnings should be structured on an independent, redundant hardware system or a mechanical interlock.
- ⊘ EMG7 is not intended for use for aircraft equipment, aerospace instruments, trunk line communication equipment, nuclear power control equipment, and medical equipment that concerns life support, and or other equipment that concerns high reliability and safety. It cannot be used for these purposes.
- ❗ When using the EMG7 for purposes that concern high reliability and safety of functions and accuracy, such as transport equipment (trains, automobiles, ships, etc.), crime/disaster prevention devices, various safety devices, and medical equipment that does not concern life support, be sure to have safety features including redundancy and false operation prevention measures incorporated into the entire system.
- ⊘ Display will black out when the backlight goes out. If mistakenly operated in this condition, it might result in improper operation. Do not design touch-switches that might cause human injuries and material damages on the EMG7:
Below symptoms will occur when the backlight goes out:
1: Display goes out when "backlight off" function is not set.
2: Display does not recover when display is touched after display goes out with "backlight off" function set.

Warnings for Handling

- ⊘ Do not modify/disassemble the EMG7. It may cause fire and/or electric shocks.
- ⊘ Do not use around flammable gas. It may cause explosions.
- ⊘ Do not put any kind of liquid, such as water, and metals in to the product. It may cause fires and/or electric shocks.

Warnings for Wiring

- ❗ For wiring and installation, please refer to the manual and specification in order to conduct it correctly. It may cause fires and/or electric shocks.
- ❗ Before installing the power cable, make sure power is not being supplied from power source. It may cause electric shocks.
- ⊘ Do not use power voltage other than what is specified. It may cause fires and/or electric shocks.

Warnings for Applying Current and Maintenance

- ⊘ Do not insert and remove communication cable while applying power.
- ❗ EMG7 uses lithium batteries for the clock and part of memory back-up. Batteries may need to be replaced after prolonged use. Please contact us when battery needs to be changed. Do not attempt to exchange batteries by yourself. It may cause injuries

3-2 Cautions



Cautions for installation

- ❗ Make sure cables are securely connected to connectors to avoid wrong input and output due to loose connection.

Cautions for Applying Current and Maintenance

- ⊘ During access to microSD card, do not turn off the EMG7 or pull out the microSD card. It might damage the data inside of the microSD card.

Cautions for Wiring

- ❗ Use D type grounding dedicated to EMG7 for FG terminals. It may cause electric shocks or malfunctions.
- ❗ Make sure chips and objects from wiring do not enter the EMG7. It may cause fire or malfunctions.

Cautions for Disposal

- ❗ When disposing the product, please treat it as industrial waste.

Precautions for Safe Use

- ⊘ Do not press down hard on the display area of EMG7 with hard objects. It may break the LCD panel and may cause injuries. Also, do not press down on the panel with sharp objects such as mechanical pencils or drivers. It may damage the displays.
- ⊘ Installing EMG7 in areas out of the range of the specification will cause failures.
- ⊘ Do not use in areas where temperature rises and dwells rapidly. It may cause failures.
- ⊘ Avoid areas where rapid temperature change could cause condensation. It may cause failures.
- ⊘ Do not put any kind of liquid, such as water, or any metal parts into EMG7. It may cause failures or electric shocks.
- ⊘ Do not use or keep EMG7 in locations with exposure to direct sunlight, high temperature, fine particles, humidity, and/or vibrations.
- ⊘ Do not use or keep in areas where gasified chemicals are exuded into the air, or where chemical contamination can occur.
Acid, Alkali, other saline chemicals: Failures due to corrosion
Organic solvents: Fire
- ⊘ If the surface of EMG7 gets dirty, wipe with a dry, soft cloth dampened with a neutral detergent then wrung dry.
Do not use thinner or organic solvents.
- ⊘ LCD of display will deteriorate with ultraviolet rays. Do not use or keep in areas under strong ultraviolet rays.
- ❗ When stored in sub-ambient temperature, LCD of display might coagulate and cause damage to the panel.
Also, when stored in over-ambient temperature, the LCD will turn into isotropic liquid and will not turn back to its original state. Please store in specified ambient temperature.
- ❗ After turning off the power of EMG7, leave for a while before turning the power back on. It might not function normally.
- ❗ Be sure to take back-up assuming the loss of data in the EMG7 in an event of an unexpected accident.

3-3 Handling of LCDs

- 1) The LCD display contains skin-irritating materials. If liquid materials flow out due to damage and comes in contact with skin, wash the area under running water for at least 15 minutes and consult a doctor.
- 2) The LCD display might have uneven brightness according to the contents being displayed. This is not a malfunction.
- 3) Minute spots (dark or bright) may occur in the LCD display elements. This is a basic characteristic of the LCD display and not a malfunction.
- 4) When LCD display is viewed outside the specified view angel, the color might seem different. This is a basic characteristic of the LCD display and not a malfunction.
- 5) When displaying a same image for a long period of time, it might cause an image lag. This is a basic characteristic of the LCD display and not a malfunction.

In order to avoid image lags, please follow the below procedures:

1. When leaving the same image displayed, use the" display off" function.
2. Change the image displayed periodically and do not display the same image for a long period of time.

3-4 Handling of Touch Screens

- 1) If elements that change ambient environments or electric fields (capacitors with large capacity, power units, and materials with high permittivity such as metals) are set close to the product, it might have impact to the coordinate detection. Make sure to keep a good distance from the above unstable elements as much as possible when designing.
- 2) Due to the characteristics of the touch screen, its functions might become unstable according to the environment it is installed. For correct operations, perform sensitivity sensor calibration when building into a device.
Also if at any time the touch screen operation become unstable due to changes in environment or installation conditions, perform sensitivity sensor calibration.
- 3) The touch screen surface is made of glass. Glass is subject to break once scratched. Please handle with care and avoid glass from contacting other glass and hard objects.
- 4) Touch screen may not operate correctly when there is moisture on the surface.
When moisture is detected on the touch screen surface, please wipe it dry before use.
- 5) When designing applications, consider the fact that area slightly outside the display might be read as a coordinate due to the characteristics of the touch screen when touched.


3-5 Handling of microSD card

- 1) Use a computer for important data and take backup to an outside media (hard disc, CD-R, etc.) regularly. We will not be held liable for any data lost or changed that is registered in the microSD card.
- 2) Do not remove the microSD card or turn the unit power off during write or read. It may cause the data inside the unit or the microSD card to be lost or damaged (deleted).
- 3) Please keep the socket terminal of the memory cards and microSD card clear of foreign objects.
- 4) Do not touch the terminals with fingers or metal objects. It may cause malfunctions.
- 5) When inserting the microSD card, make sure it is inserted in the correct direction.
- 6) Do not apply undue force when inserting/removing.
- 7) Do not insert anything other than a microSD card into the microSD card socket. Also be careful of any foreign objects entering the socket.
- 8) Do not bend, break, or place under heavy objects.
- 9) Do not place in areas with sudden temperature change. Condensing will cause malfunctions.
- 10) Do not place in areas near corrosive chemicals or where corrosive gases evolve. It may cause malfunctions.
- 11) When cleaning, wipe with a dry soft cloth.
- 12) When carrying and storing, place the microSD card memory card in its protection case


4. Items Included in Packag

Below are included in the package. Please check before use.

- EMG7 Main Unit 1unit

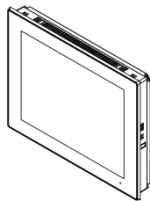


 - Mounting Bracket (IS-TK-01) (4pcs/set)




- Gasket (SWPK-12-01) (1)


* Pre-installed to unit

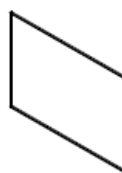


- Power Connector (SWCN-01-03) (1)

 

- Serial Connector (SWCN-01-10) (1)

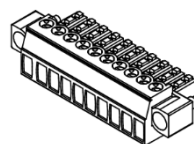

- Installation Guide (2) *¹

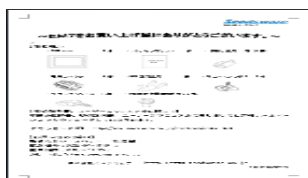

- Packaging List (2) *¹




*1. 1 English version and 1 Japanese version.

<Note>

Although efforts have been made to ensure quality and packaging at shipment, should you notice any damage or a shortage of parts, please contact a dealer or Seedsware for additional instructions before use.

5. Names of Parts

5-1 Front

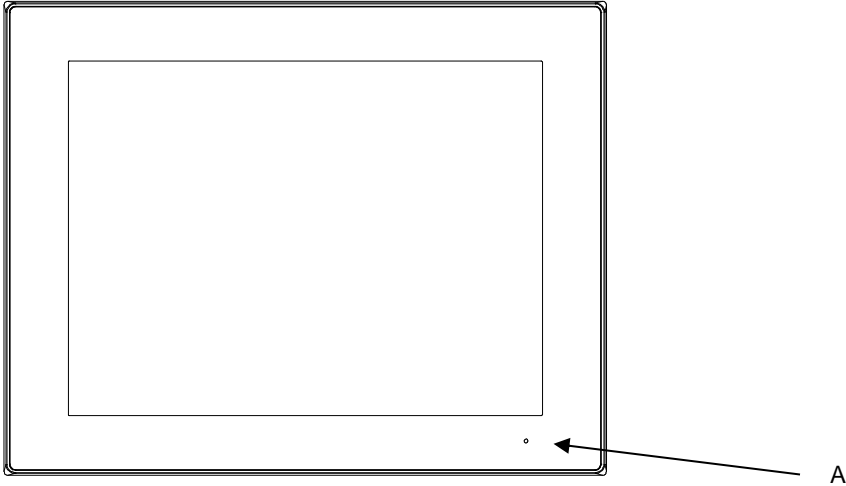


A) Status LED

The status LED displays the state of the EMG by the LED color shown below:


LED State	EMG State
Off	Power not applied
Amber, steady	OS starting
Green, steady	Normal operating state
Green, blinking	Backlight off (Normal Operation)

5-2 Back

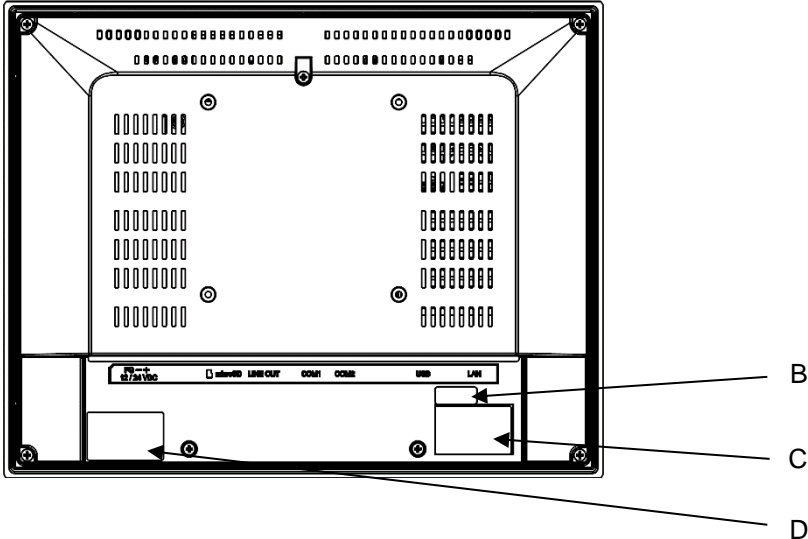


- B) License label
- C) Product label
- D) FCC label

5-3 Top

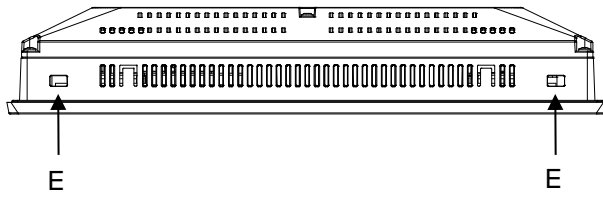

E) Mounting Holes

5-4 Bottom

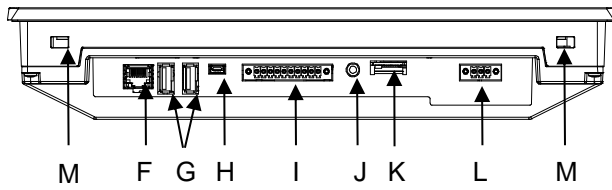

- F) Ethernet
- G) USB Host
- H) USB Device
- I) Serial Port (COM1/COM2)
- J) LINE OUT
- K) microSD Card Slot
- L) Power Input
- M) Mounting Holes

6. External Interface

6-1 microSD Card Slot

- Connector : microSD / SDHC memory card (Push-in/push-out method)
- Corresponding media : microSD/SDHC memory card
- Maximum capacity : 32GB

6-2 Serial Port (COM1/COM2)

- Serial port :COM1 RS232C
- :COM2 RS232C
- Connector : Euro terminal connector (<Tyco Electronics> 1-284539-0)
- Recommended cable connector : SWCN-01-10(<Tyco Electronics>1-284510-0) *Included as accessory.

PIN No.	Signal	Schematic
COM1		
1	TXD	
2	RXD	
3	RTS	
4	CTS	
5	SG	
COM2		
6	TXD	
7	RXD	
8	RTS	
9	CTS	
10	SG	

6-3 Ethernet

Ethernet : 10BASE-T/100BASE-TX

Connector : RJ-45

PIN No.	Signal	Schematic
1	TX+	
2	TX-	
3	RX+	
4	NC*1	
5	NC*1	
6	RX-	
7	NC*1	
8	NC*1	

*1. NC is 'not connected'.

Status LED

LED State	State
On, Green	LINK/ACT
On, Yellow	SPEED

Compatible cable : Above category 5

6-4 USB Host Port

Interface : USB2.0

Number of Ports : 2

Connector : Type-A

Maximum supply current: 0.5A / Port

PIN No.	Signal (All ports common)	Schematic
1	USB_VCC	
2	D-	
3	D+	
4	SG	

6-5 USB Device Port

Interface : USB2.0

Connector : Type-B Mini connector

PIN No.	Signal	Schematic
1	USB_VCC	
2	D-	
3	D+	
4	NC*1	
5	SG	

※1 NC is "Not Connected"

6-6 Audio Interface (LINE OUT)

Interface : LINE OUT (Stereo)

Connector : ϕ 3.5 Stereo JACK

Maximum output level : 1Vrms

Use built-in amplifier when connecting to speakers.

PIN No.	Signal	Schematic
1	SG	
2	Lineout R	
3	Lineout L	

6-7 Power Connector

Interface : 12VDC/24VDC IN

Connector : Euro terminal connector (<Tyco Electronics>284510-3)

Recommended cable connector : SWCN-01-03(<Tyco Electronics>284510-3) *Included as accessory.

PIN No.	Signal	Schematic
1	FG	
2	GND	
3	+12VDC /+24VDC	

7. Specification

7-1 General Specification

Item		Specification
Power	Voltage Rating	12VDC / 24VDC
	Voltage Allowance Range	12VDC±20% / 24VDC±20%
	Power Consumption *1	20W or under (Typ. 11W)
	FG Connection	FG (Frame GND) and SG (Signal GND) are connected internally. FG (Frame GND) and GND are not connected.

*1 Power consumption for EMG7 unit only. Consider the power consumption of USB devices when connecting the USB.

7-2 Environmental Specification

Item	Specification
Ambient Operating Temperature (inside of panel and display surface)	0°C to 55°C
Ambient Storage Temperature	-10°C to +60°C
Ambient Operating Humidity	10%RH to 85%RH (non-condensing. Wet-bulb temperature is 39 °C or less)
Ambient Storing temperature	10%RH to 85%RH (non-condensing. Wet-bulb temperature is 39 °C or less)
Dust	Prohibited
Corrosive Gas	Corrosive gas Prohibited
Environment	Pollution Degree 2, Indoor use
Pressure Resistance	800hPa to 1114hPa (Altitude up to 2000m)
Vibration Resistance	IEC61131-2(JIS B 3502) compliant 5Hz to 9Hz Single amplitude 3.5mm 9Hz to 150Hz Fixed acceleration 9.8m/s ² X,Y,Z directions for 10times(100min.)

7-3 Installation Specification


Item	Specification
Grounding	Grounding resistance of 100Ω, 2mm ² [0.0062inch ²] or thicker wire, or your country's applicable standard.
Structure	Protection Structure: IP65 * ¹ (Front side only when mounted to panel) Installation : Panel mounting
Cooling	Natural cooling
Weight	Approx. 2800g
External Dimensions	314 (W) mm x 284 (H) mm x 56 (D) mm
Panel Cutout Dimensions	302 _{+0.5/-0} (W) mm x 236 _{+0.5/-0} (H) mm

- *1. Protection structure of the front part of the unit when installed to a panel. Although it has been tested under conditions equivalent to the standards shown in the specification, use under all environments are not guaranteed. Especially for oils defined in the test, in cases where EMG7 is prolonged to vaporized oils or cutting fluids with especially low viscosity, oil might enter the front area through an area where touch screen has lifted and may need special measurements. Please check the installation environment prior to use. Also, gaskets that have been used for a long time or have once been installed to panels, the original level of the protection cannot be guaranteed. To maintain the stable, original protection level, we recommend replacing the installation gasket regularly.


8. Installation

8-1 Installation Conditions

- When mounting to panel, be sure to have enough room to insert and remove the microSD card, cables, and mounting brackets.
- Consider specification temperature between EMG7 and the structure and parts. Be sure to have good ventilation.
- Please use in ambient temperature of 0 to 55°C and ambient humidity of 10 to 85%RH(Wet bulb temperature is 39°C or less)
- Ambient operation temperature indicates the temperature inside the cabinet where it is installed as well as the panel surface.

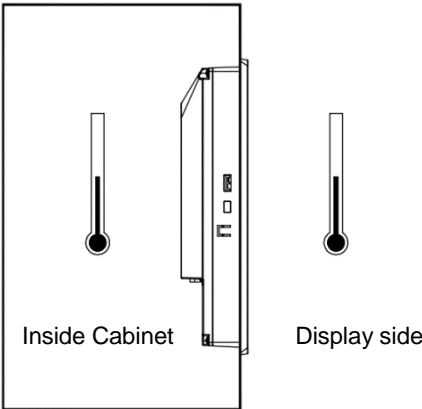

- EMG7 should not be mounted at an angle more than 30° from vertical state as illustrated in the following figure.

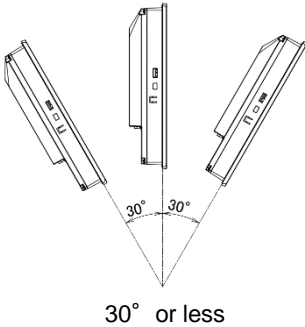


- When installing the EMG7 in a slanted panel of angle 30 degrees or more, please use forced air cooling to ensure the temperature specification

8-2 Panel Mounting

8-2-1 Panel Dimension

Panel thickness range: 1.6 mm to 5.0 mm

Panel opening size : 302 × 236mm

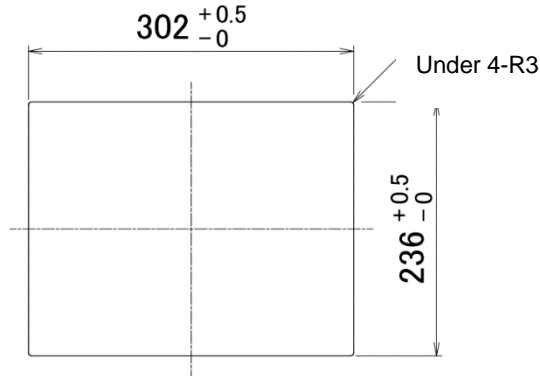

The material of the mounting panel, please use the metal.


Be recommended panel thickness range, depending on material and size, may not maintain the strength when an impact is applied.

Please do take into account, such as reinforcement in the environment impact, such as join.

There is a possibility of personal injury or product damage when dropped product, Please be careful not to drop.

8-2-2 Installing the Gasket

Please install the gasket even in environments where it may not seem necessary.

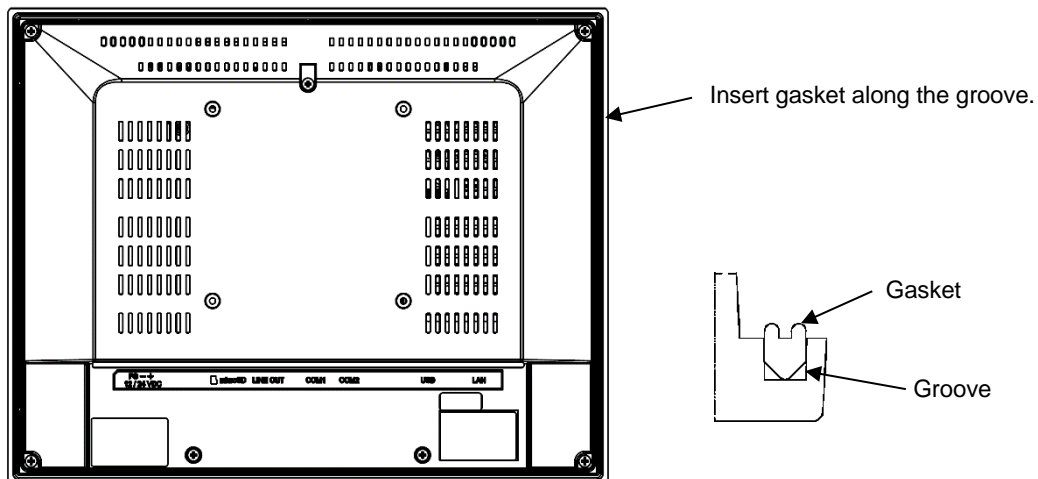


*Gasket will be installed to the unit before shipment.

Please make sure it is properly installed before use.



8-2-3 Installation Procedure

- ① Install unit (with gasket installed) to the panel from the front.

*Make sure it is installed in the correct direction

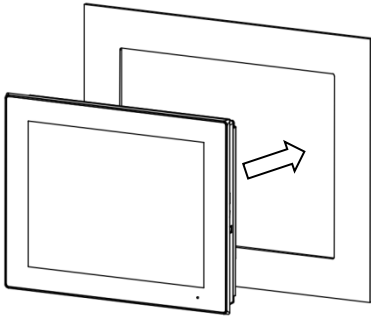


- ② Insert mounting hook in the mounting holes in the four locations of the unit.

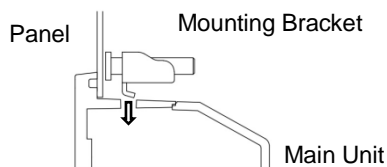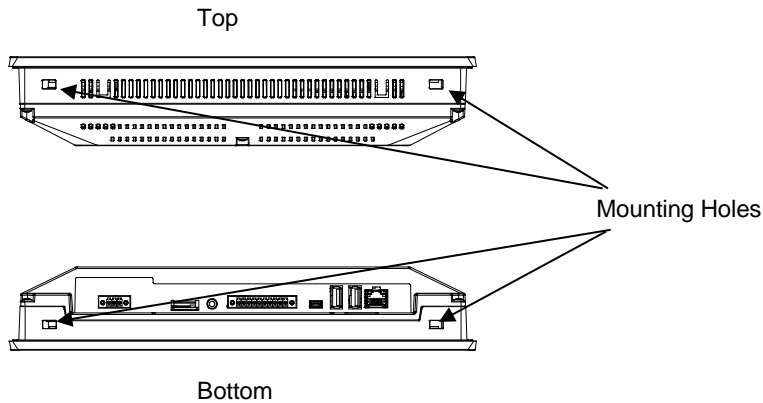

- ③ Tighten screw of mounting bracket and slide the bracket.

Tighten the screws a little at a time in all four locations working diagonally.

Appropriate torque for tightening is 1.0 to 1.2N·m.

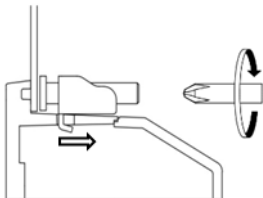

Note


- If the screw of the mounting bracket is not perpendicular to the panel, the unit might fall off the panel .
- If screw is too tight, the unit might deform or damage. Please tighten with appropriate torque

8-3 Mounting to a “VESA” Arm

EM can be installed on a commercially available Video Electronics Standards Association (VESA) MIS-D arm, stand, or apparatus that is listed to comply with the UL1678 standard.

Refer to manual of arm or stand for installation procedures.

Mounting Hole dimension is as below

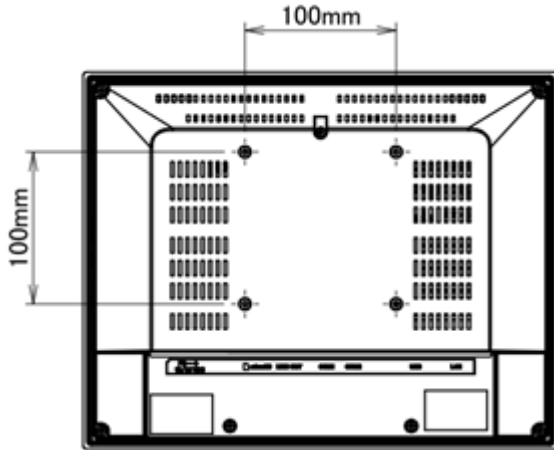

Use M4 screws to mount.

The tightening torque range is 0.7 to 0.8Nm.

M4 screws used should be 8mm or less in length

VESA Standard Arm

VESA is an abbreviation for “Video Electronics Standards Association”, an industry group that establishes standards concerning displays for computers.

VESA establishes SVGA standards and VL Bus standards, and standardized below 2 types for the installation of LCD monitors.

- 75mm×75mm pitch
- 100mm×100mm pitch

EMG7 complies with the VESA standard for 100mm.

9. Wiring

Make sure power is not supplied when connecting to avoid the risk of human injury or damage to equipment due to electrocution.

Do not turn the power on until all connections have been made.

When connecting each interface, review each interface specifications.

Prepare the cables to be used according to the specifications.


9-1 Using Accessory Connectors

Accessories of this product include Euro terminal connector for power and serial interface.


Connect the power, serial interface cable using the attached accessory cable.

■ Connector Specification

① Power Connector : SWCN-01-03 (284510-3 by Tyco Electronics)

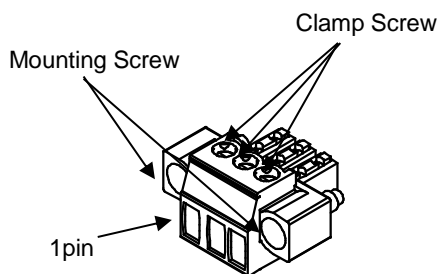

② Serial Connector : SWCN-01-10 (1-284510-0 by Tyco Electronics)

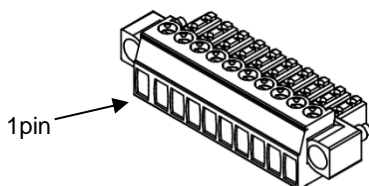

Clamp Screw Size : M2

Mounting Screw Size : M2.5

Torque : 0.3N·m

■ Compliant Wire

Wire type	Single wire, Stranded wire
Conductor size	AWG14-30
Wire Stripping Length	

When using stranded wire, the twisting of the core wire must be appropriate in order to avoid fine wires of the core wire from short circuiting with each other or electrodes nearby.

■Wiring Procedures

Wire the power cables as instructed below.

- (1) Make sure power is not conducting.
- (2) Loosen the screw clamp on the connector.
- (3) Strip the cable; twist the core wire and insert to connection.
- (4) Tighten the screw clamp and fix the wire.
- (5) Connect the connector to interface of unit.
- (6) Tighten mounting screw and fix to unit.

9-2 Cautions for Power Supply Wiring

- (1) Wire the power source, input/output device, and power device of the EMG7 isolating each by sequence.
- (2) Do not bundle main circuit (High voltage, high current) wires, signal wires, and power cables, nor put them close to each other.
- (3) Twist the power cable as short as possible to improve noise immunity.
- (4) If there are any noise effects, attach a ferrite core to the power cable.
- (5) A Safety Extra Low Voltage (SELV) and Limited Energy Circuit or SELV and Class 2 dc power supply.
- (6) The user calculates proper gauge wiring for current carrying capacity and loss according to local regulations.
- (7) Connect a lightening surge absorber for lightening surge measures.
- (8) Separate lightening surge absorber connection (E1) and grounding of EMG7 (E2).
- (9) Choose the lightening surge absorber so the power voltage maximum increase does not exceed the maximum capacity voltage circuit of the lightening surge absorber.

9-3 Cautions for Grounding

- (1) Have a dedicated grounding for power source cable FG. "Grounding construction is type D grounding, grounding resistance is 100Ω or lower."
- (2) SG (Signal ground) and FG (Frame ground) is connected inside of EMG7. When connecting connection apparatus and SG, design the system so there is no short circuiting loop.
- (3) Use a grounding wire of 2mm² or more. Shorten the grounding wire distance near the grounding point of EMG7. If the grounding wire is long, than use a large insulation wire when setting.


9-4 Caution for Wiring of Signal Lines

- (1) Wire the signal wires in a different wiring sequence than the power cables and power circuits.
- (2) If the power circuit cable cannot be wired in a different sequence, use a shield cable and ground the shield terminal.
- (3) If there are any noise effects, attach a ferrite core to the signal wire


10. Inserting and Removing the microSD Memory Card

10-1 Inserting the Memory Card

1) Insert the micro SD in the card slot on the bottom of the unit.

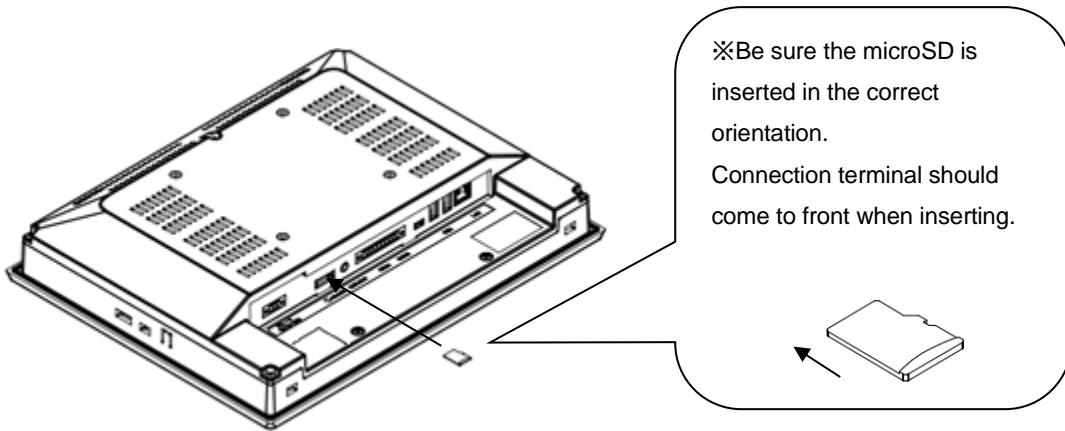


(2) Push the microSD in by finger until it locks.

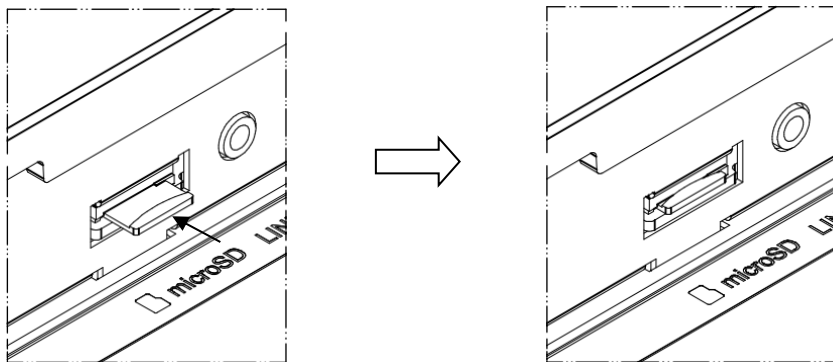


MicroSD will lock inside the slot

10-2 Removing the microSD Memory Card

(1) The microSD will slightly pop out when pushed in further by finger.

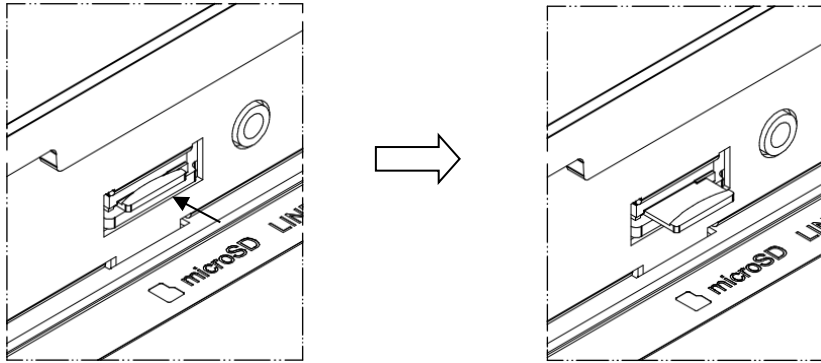

(2) Pinch the microSD and pull out.

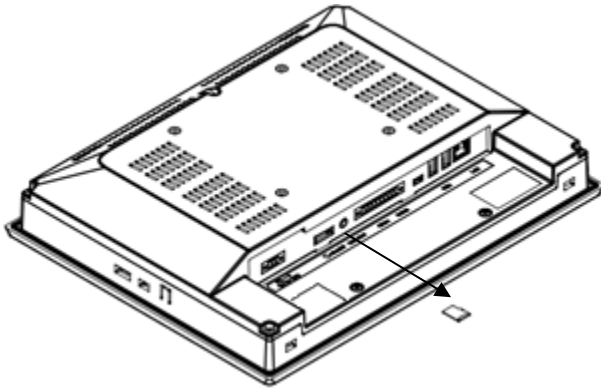

Note:

- Be careful of the direction of the microSD when inserting. Do not insert in the wrong direction.
- Be sure to take back up data of the microSD assuming unexpected accidents.
- Do not attempt to forcibly pull out the microSD.
- Do not remove the microSD when card is in access.

11. Calibration

There are two types of calibration to EMG7. One type is sensor sensitivity calibration to optimize the touch screen function by resetting the influence of ambient noise or metals of the installation environment, and the other is to set the value of coordinate with the pressed point.

11-1 Sensor Sensitivity Calibration

Calibrate after building in or when the touch screen function becomes unstable due to the ambient environment or its installation condition.

It is recommended that the sensor sensitivity calibration be performed in the same environment and condition that it will be used in.

Sensor sensitivity calibration can be done by set-up tool.

See the setup-tool manual (14A4A5-00037E) for further detail.

11-2 Coordinate Calibration

Calibrate if there is a big misalignment of the pressed point and the detected coordinate.

Coordination Calibration can be performed from the set-up tools.

See the setup-tool manual (14A4A5-00037E) for further detail.

12. Starting Method

Make sure power wiring is complete before turning on the power.


Status LED will light up (orange).

Momentarily the status LED will become Green and OS will boot up.

13. Maintenance

15-1 Display

When surface of display or frame gets dirty, wipe with a soft cloth damped in diluted neutral detergent and wrung dry.

 Do not use thinner, organic solvent, or strong acidic solvents.

15-2 Regular Maintenance

To keep the EMG7 in best shape, please conduct maintenance on a regular basis.

Surrounding Environment Check

(1) Ambient temperature is within specification range (0 to 55°C)

(2) Ambient humidity is within specification range (10 to 85%RH)

(3) Ambient pressure is within specification range (800 to 1114hpa)

Electronic Specification Check

(1) Voltage is within permissible range(12VDC±20% / 24VDC±20%)

Installation Check

(1) Make sure the connection cables are inserted firmly and completely.

(2) Mounting brackets are installed firmly without any looseness.

15-3 Changing of Batteries

EMG7 has built in battery for back up of SRAM and clock data.

If battery needs to be exchanged, please contact us at Seedsware.

Do not attempt to exchange the battery yourself. It may cause injuries.

Note

- We will not be held liable for any data lost at battery exchange.

Please be sure to take SRAM data backup.

14. Compatible Standards

EMG is intended for use in industrial environments and, when properly installed, shall comply with the following agency approvals.

14-1 UL Standards

This product is UL standard compliant

UL standard No.	UL Registration Model No.	UL File No.
UL 61010-1 / UL 61010-2-201 CSA C22.2 No.61010-1-12 / No.61010-2-201	G-0011U	E464360

14-2 CE Marking

This product is EMC Directive of EU compliant

Complying standard : EMI:EN 61000-6-4:2007+AI:2011
EMS:EN 61000-6-2:2005

14-3 RoHS Directive

This product is RoHS Directive of EU compliant.

14-4 FCC

The FCC requires the following note to be published according to FCC guidelines:

Note:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user is required to correct the interference at their own expense. Changes or modifications to this unit that are not expressly approved by Seedsware could void the user's authority to operate the equipment.

Industry Canada requires the following note to be published:

Note:

This Class A digital apparatus complies with Canadian CAN ICES-3 (A)/NMB-3 (A).

15. List of Option

■ Mounting brackets

Model	Description
IS-TK-01	4pcs

■ Gasket

Model	Description
SWPK-12-01	1 pc

■ Protection sheet

Model	Description
SWCA-12S00-001	Package of 3pcs

■ Connector

Model	Description
SWCN-01-03	Power connector 3Pin 1 pcs
SWCN-01-10	Serial (COM1 / COM2) 10Pin 1 pcs

16. Warranty and Repair

16-1 Inquires

In case of defects or when repair is needed for Seedsware products, feel free to contact us.

In case of making inquiries, please confirm the issue or the symptom beforehand. Also, when sending the product, please include a fully filled "Repair Request" form with the issue or the symptom noted.

Please make sure the product is packaged so it will not get damaged during shipment.

- Where to contact:
USCO America Inc.
+1-630-832-0438 (Business Hours: 9:00a.m. ~5:45p.m. CT)

16-2 Warranty

The warranty period is limited to one year from the date of shipment. Any defects that occurred under proper use and environment noted in the specification will be repaired without charge (On-site repair). (The warranty for defects of the same area is three months.)

You will be liable for all repair fees even within the warranty period for any conditions listed below.

- (1) Any malfunctions and damages during transportation and transfer of mishandling by user after delivery.
- (2) Any malfunctions and damages caused by natural or man-made disaster
- (3) If the product is used under any condition, in any environment, or by any method other than those described in the product specification, catalogs, manuals or others.
- (4) Replacement of consumables
- (5) Any malfunctions and damages caused by failure of associated equipment, inappropriate consumables, and media.
- (6) Any malfunctions caused by science or technology that could not be predicted at time of sales.
- (7) Other malfunctions, damages, and/or defects that is considered to be caused by the user

The warranty only covers the product itself. Repair and replacement of damages caused by the failure of the product and/or repair and replacement will be charged.

16-3 Production Discontinuance

In the event of product discontinuance, an announcement will be made on our website at least six months prior to the discontinuance.

16-4 Repair Condition

- (1) Only Seedsware products can be repaired. Options are exempt.
- (2) Programs and data might be lost during repair. Please be sure to take back-up. Seedsware will not be held liable for any programs or data lost during repair.
- (3) All user information recorded in our product will be handled with much care. However, we ask that any important security information be deleted before repair.
- (4) Repairs will be done in our workshop after it is sent back. All shipping fee will be charged.
- (5) Seedsware will have all ownership for parts exchanged at repair.

17. Others

For comments or inquiries, contact us via e-mail or phone.

*Product, specification and/or anything noted are subject to change for improvement without prior notice.

By Phone



+1-630-832-0438 (Business Hours: 9:00a.m. ~5:45p.m. CT)

By E-mail



sales@uscoamerica.com

FAQ



www.seedsware.co.jp/global/support/faq/

Microsoft® , Windows® Embedded Compact7 is a registered trademark of Microsoft Corporation of the United States and other countries.

2nd Edition October 2016

USCO America Inc.

136 W. Valletts Street, Elmhurst, IL 60126 USA

Phone: 630-832-0438/510-931-9046



E-mail: sales@uscoamerica.com

Business hours: 9:00a.m.~5:45p.m. (Central Time)

<http://uscoamerica.com/>

This document is protected by copyright law. Photocopying, duplicating, reproducing, and modifying of this product or document in part or by whole is prohibited.

寸法許容差 呼び寸法 Nominal Dimensions	TOLERANCE
L ≤ 3	±0.4
3 < L ≤ 6	±0.48
6 < L ≤ 10	±0.58
10 < L ≤ 18	±0.7
18 < L ≤ 30	±0.84
30 < L ≤ 50	±1.0
50 < L ≤ 80	±1.2
80 < L ≤ 120	±1.4
120 < L ≤ 180	±1.6
180 < L ≤ 250	±1.85
250 < L ≤ 315	±2.1
315 < L ≤ 400	±2.3
400 < L ≤ 500	±2.5

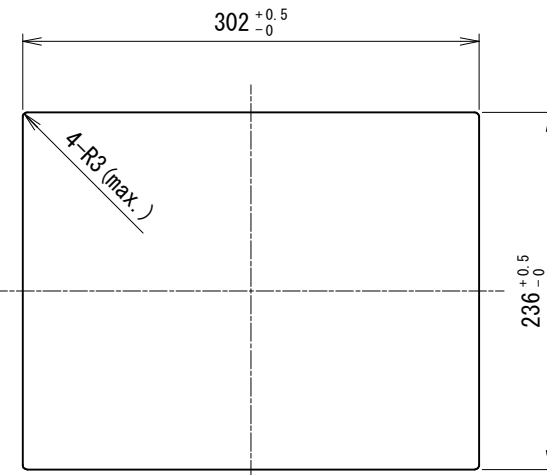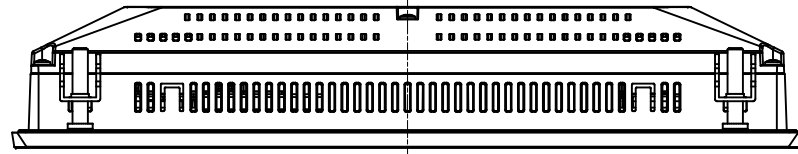


パネル開口寸法 (S=1:5)
Panel Cutout Dimensions (S=1:5)



SYM	改訂日 DATE	改訂内容 DESCRIPTION	ページ PAGE	担当 DESIGNED
	2016.09.01	新規図面登録 New Diagram Registration	-	S. Yoshimoto

NOTES

- 誤動作の恐れがある為、パネル開口寸法をお守り下さい。
又、取付けパネルには、反り、傷、凹凸のないものを使用して下さい。
To prevent malfunctions, panel opening dimension shall strictly be as specified.
Be sure to use installation panels without warpage, scratches, and dents.

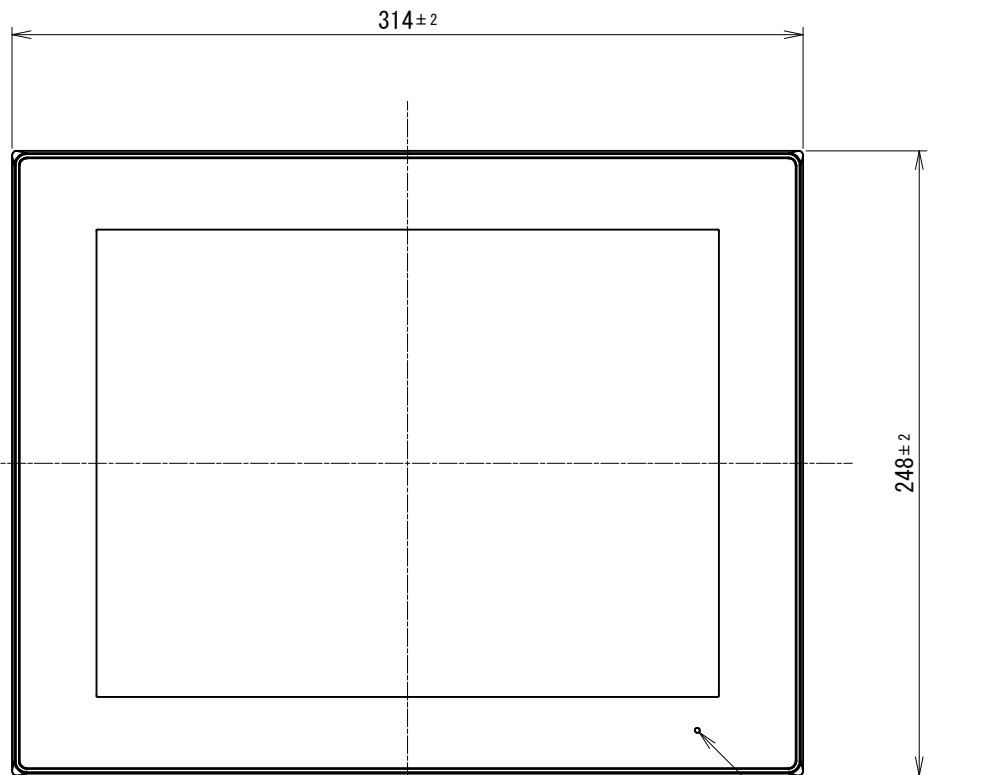


状態表示LED
Status Display LED

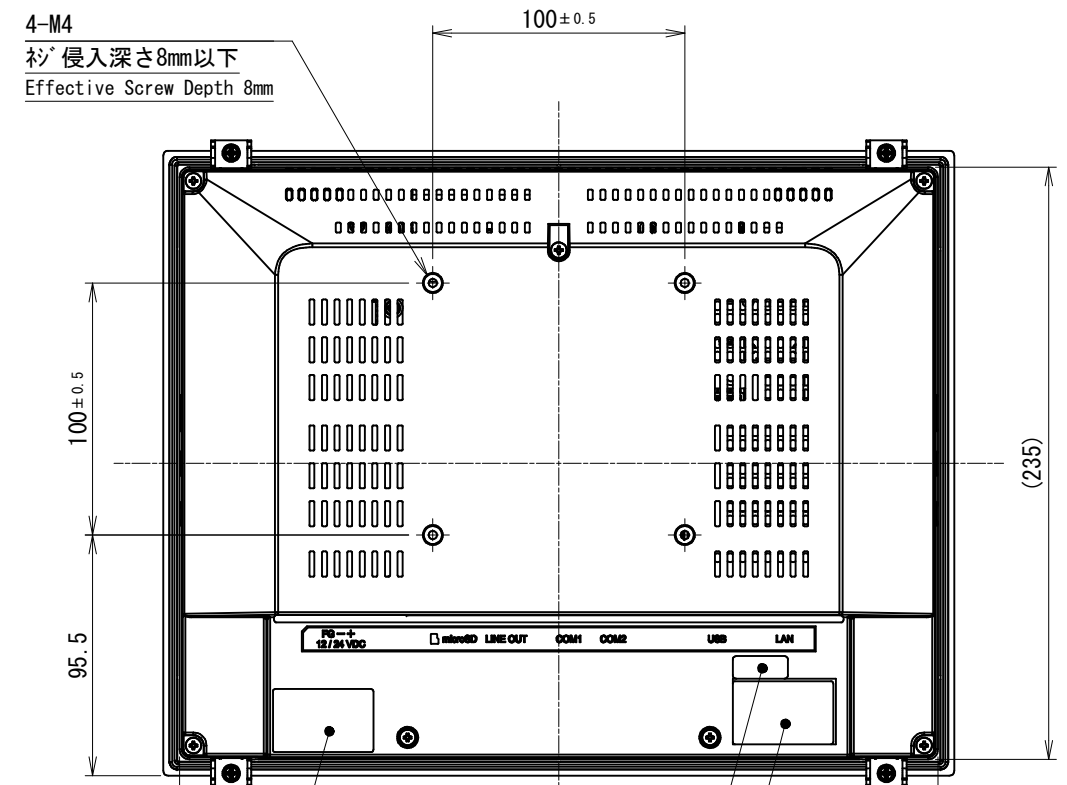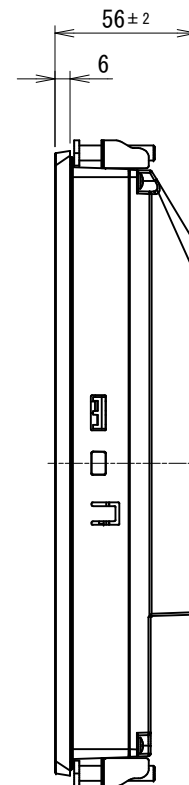

FCCラベル
FCC Label

ライセンスシール
License Label

製品銘板シール
Product Label

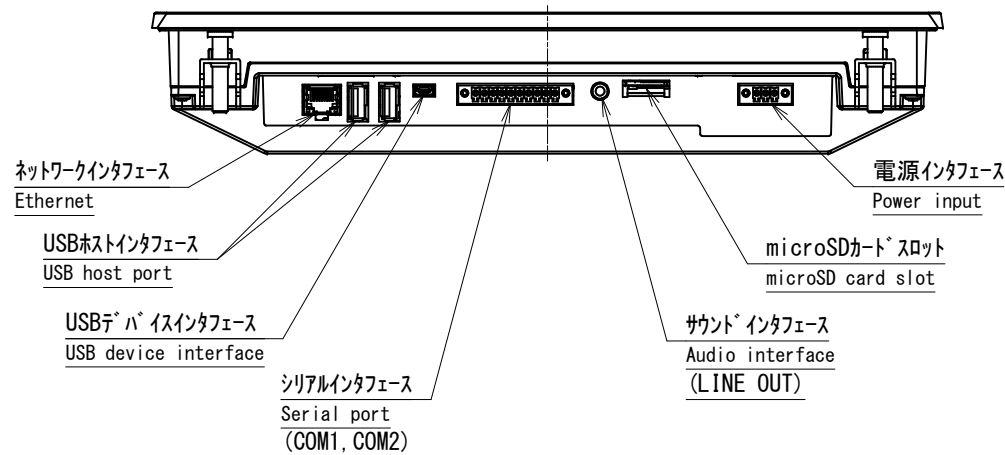

NOTES

- 指示なき寸法公差は一般寸法公差とする。
Tolerance shall be of general dimensional tolerance unless specified otherwise.

製図日 ISSUED	2016.09.01	部署 SECTION	Technical Dept.	尺度 SCALE	CAD登録名 CAD FILE NAME	13K011-2_EMG7-312A8_OUTLINE	RoHS対応品 RoHS compliant
承認 APPROVED		検図 CHECKED		1:3	製品名 MODEL	EMG7-312A8-00DC-*1*-01	
		製図 DRAWN	S. Yoshimoto	単位 UNIT	図名 TITLE	OUTLINE	ページ PAGE
		設計 DESIGNED	S. Yoshimoto	mm			1 / 1
H. Tsuji			T. Okada	Seedsware		図番 DWG No.	SM3-001909-10
				A3			